
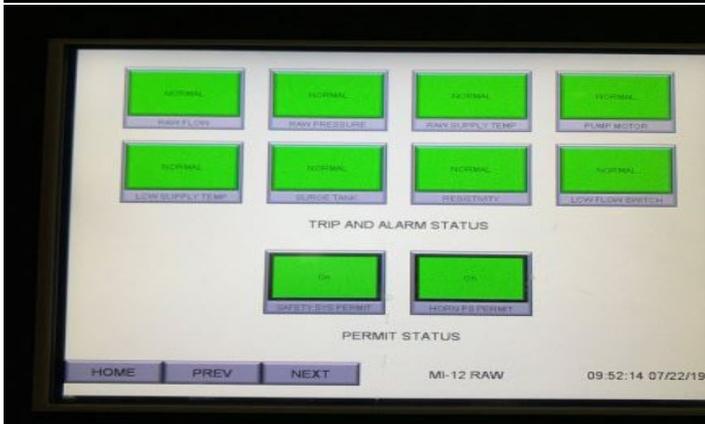


Check list for BNB horn and MI-12B before start run beam

H.L. 10/28/20

- 1- Check PLC control box make sure all the parameters are operating corrected. Example below

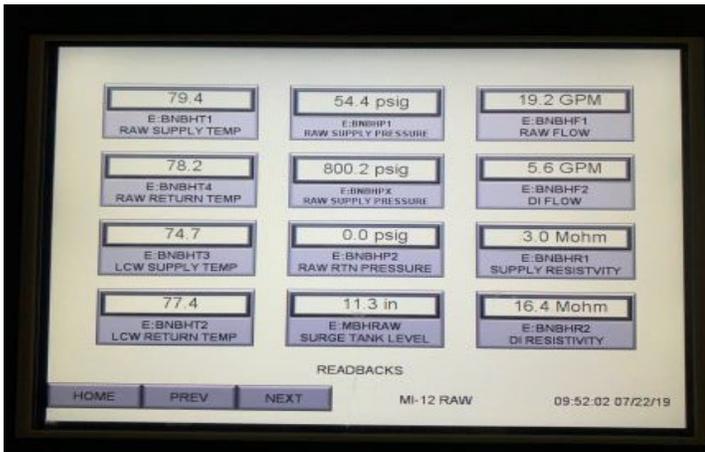

- 2- Check a chiller for horn box on top of R-blocks, make sure is on and add water if needed.
- 3- Check the target air blower it should be at 30 Hz and dehumidify horn box blower at 10 Hz (procedure how to turn on/off blower hang next to the control box).



- 4- Check stripline air blower, make sure the motor is on. The circuit breaker and on/off button at the wall, next of the motor.





- 5- In tunnel, check DI bottle line make sure is valve in, bypass line is turn off.
- 6- Check to see the LCW lines supply/return are valve in.



7- Check to see the horn box ventilation motor is on at low speed and the damper is open in corrected position.



8- Check the well on the eastside at the corner to see the sump pump is operate okay.

9- Check around for unusual items and remove them if needed.

Done